




Turn on location and Bluetooth (Skip this step if it is on)

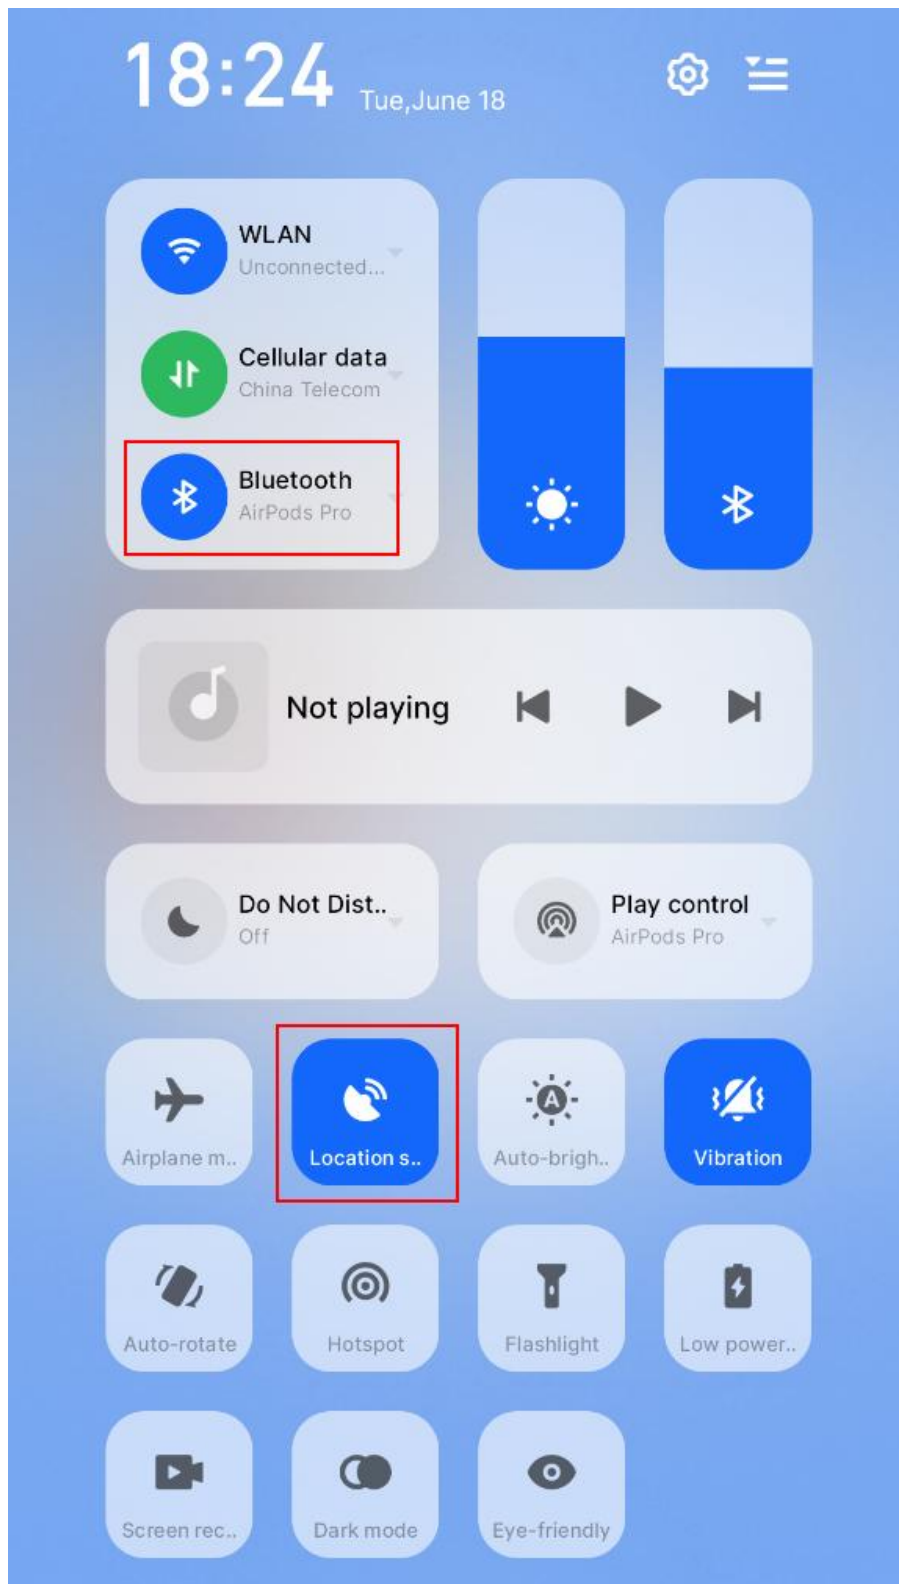


Go to APP Store, search 'bmslite', install the APP 'Octopus BMS Lite'

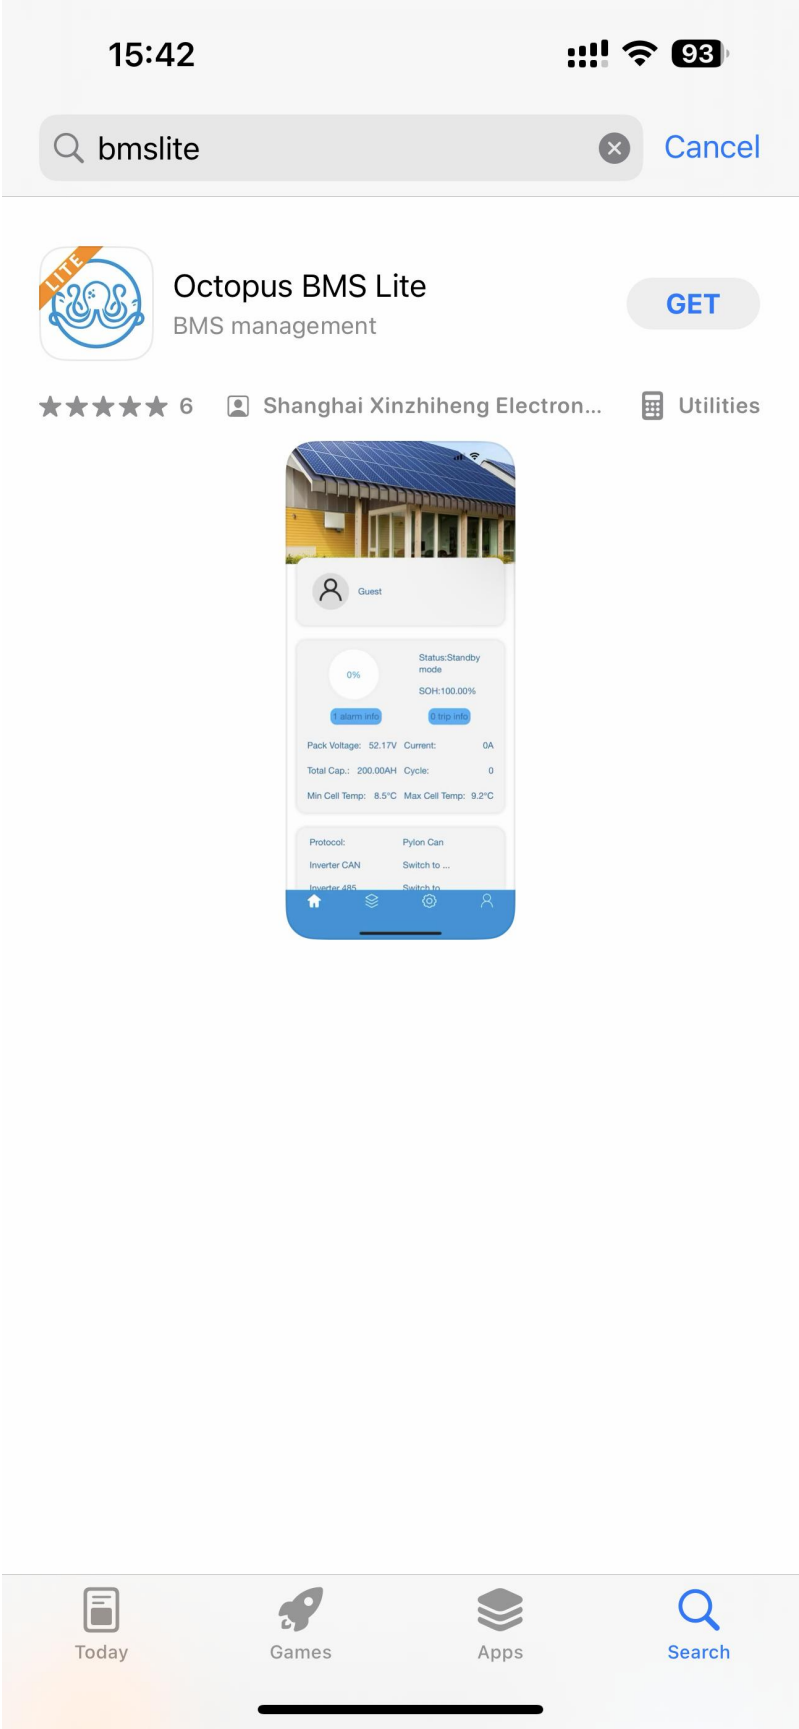

Click the OctopusBMSLite APP

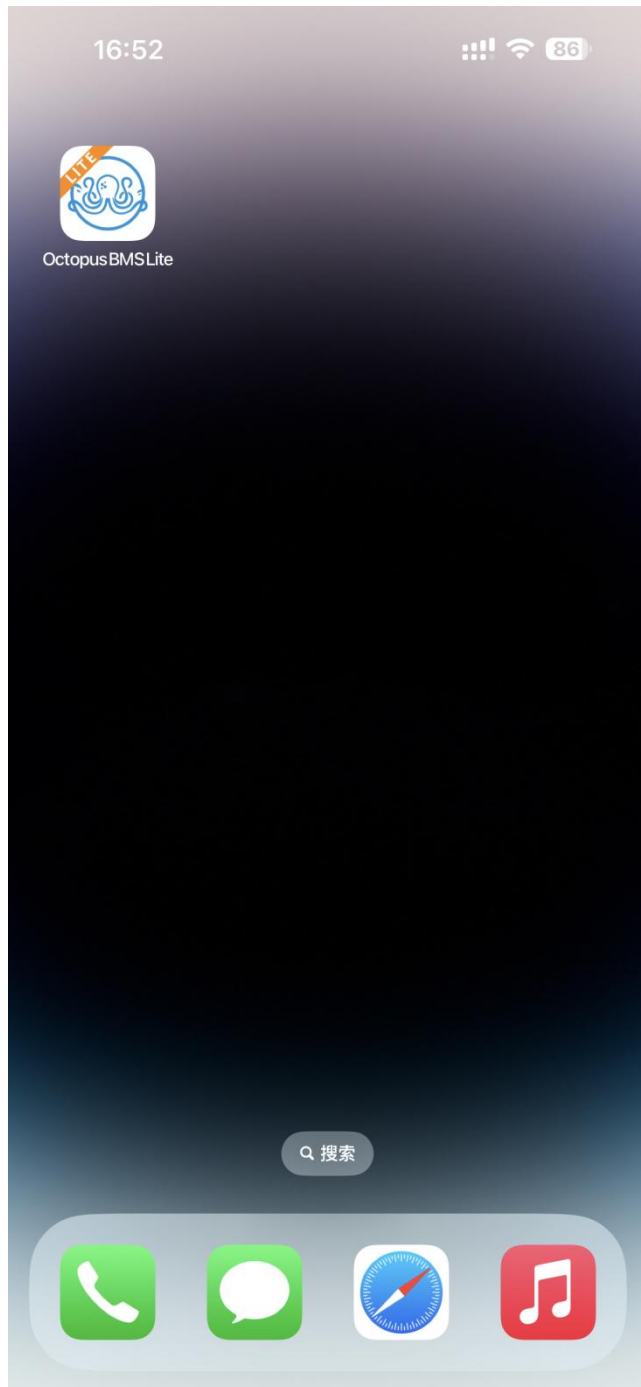

Click the Bluetooth device

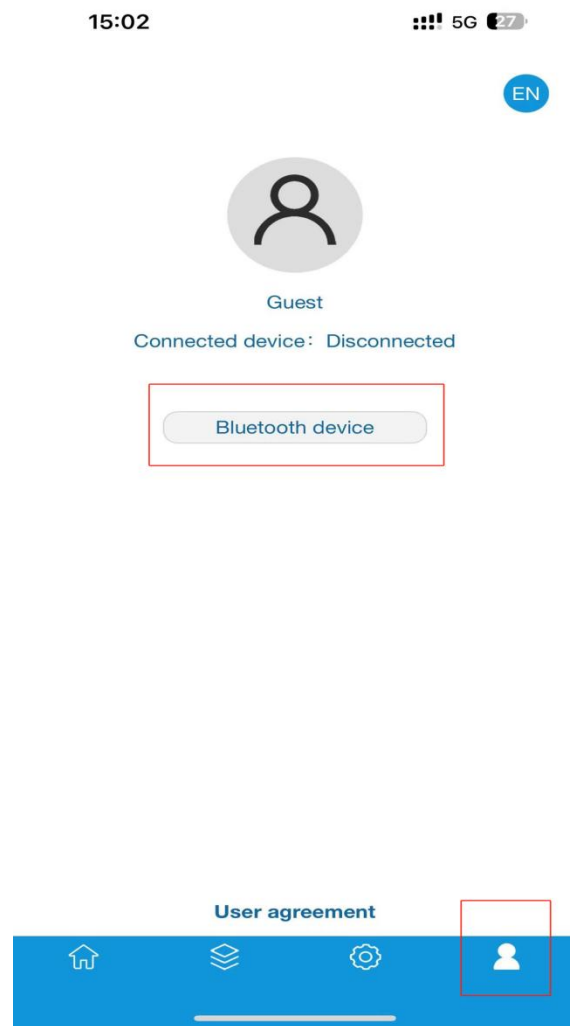

Select the corresponding serial number



Bluetooth device


Ick1_7C305A7AFEB5

SP19B2311250036

Refresh



Click on the serial number, and there will be a connection until it appears that the connection is successful, and the Bluetooth APP appears with a ✓

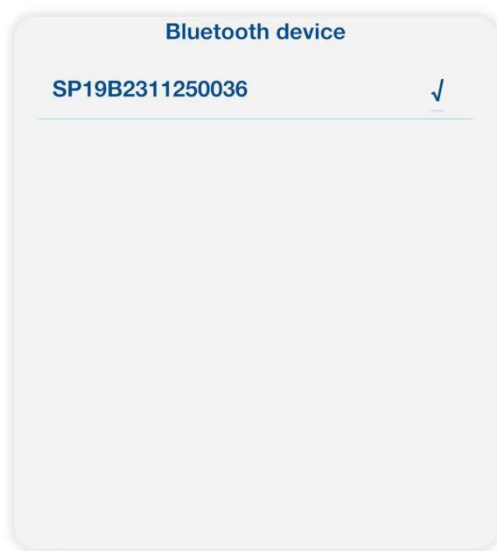

Refresh



Return to the main page to view the data in the battery and the protocol for switching the inverter.

