


How to choose the correct firmware with Seplos BMS3.0?


Method One:

100A

Hardware Version 10 has two shunts beside the terminals
(select firmware file in the V10 folder)

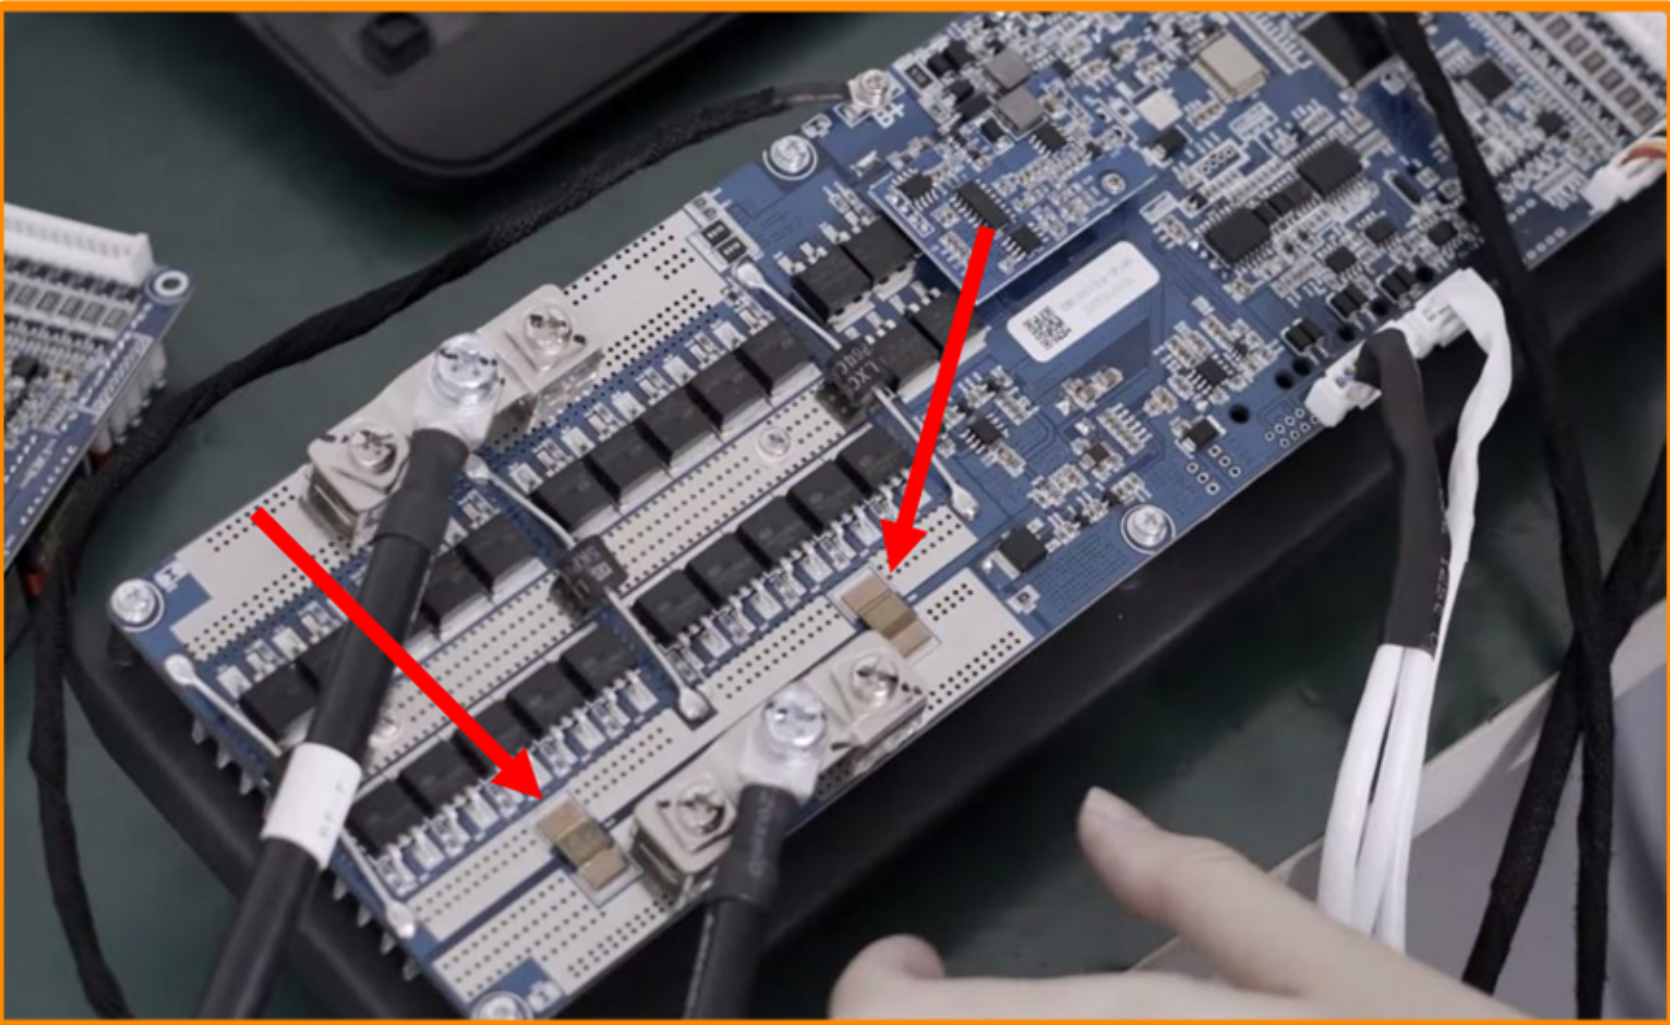


Hardware Version 11 has two shunts in between the terminals
(select firmware file in the V11 folder)

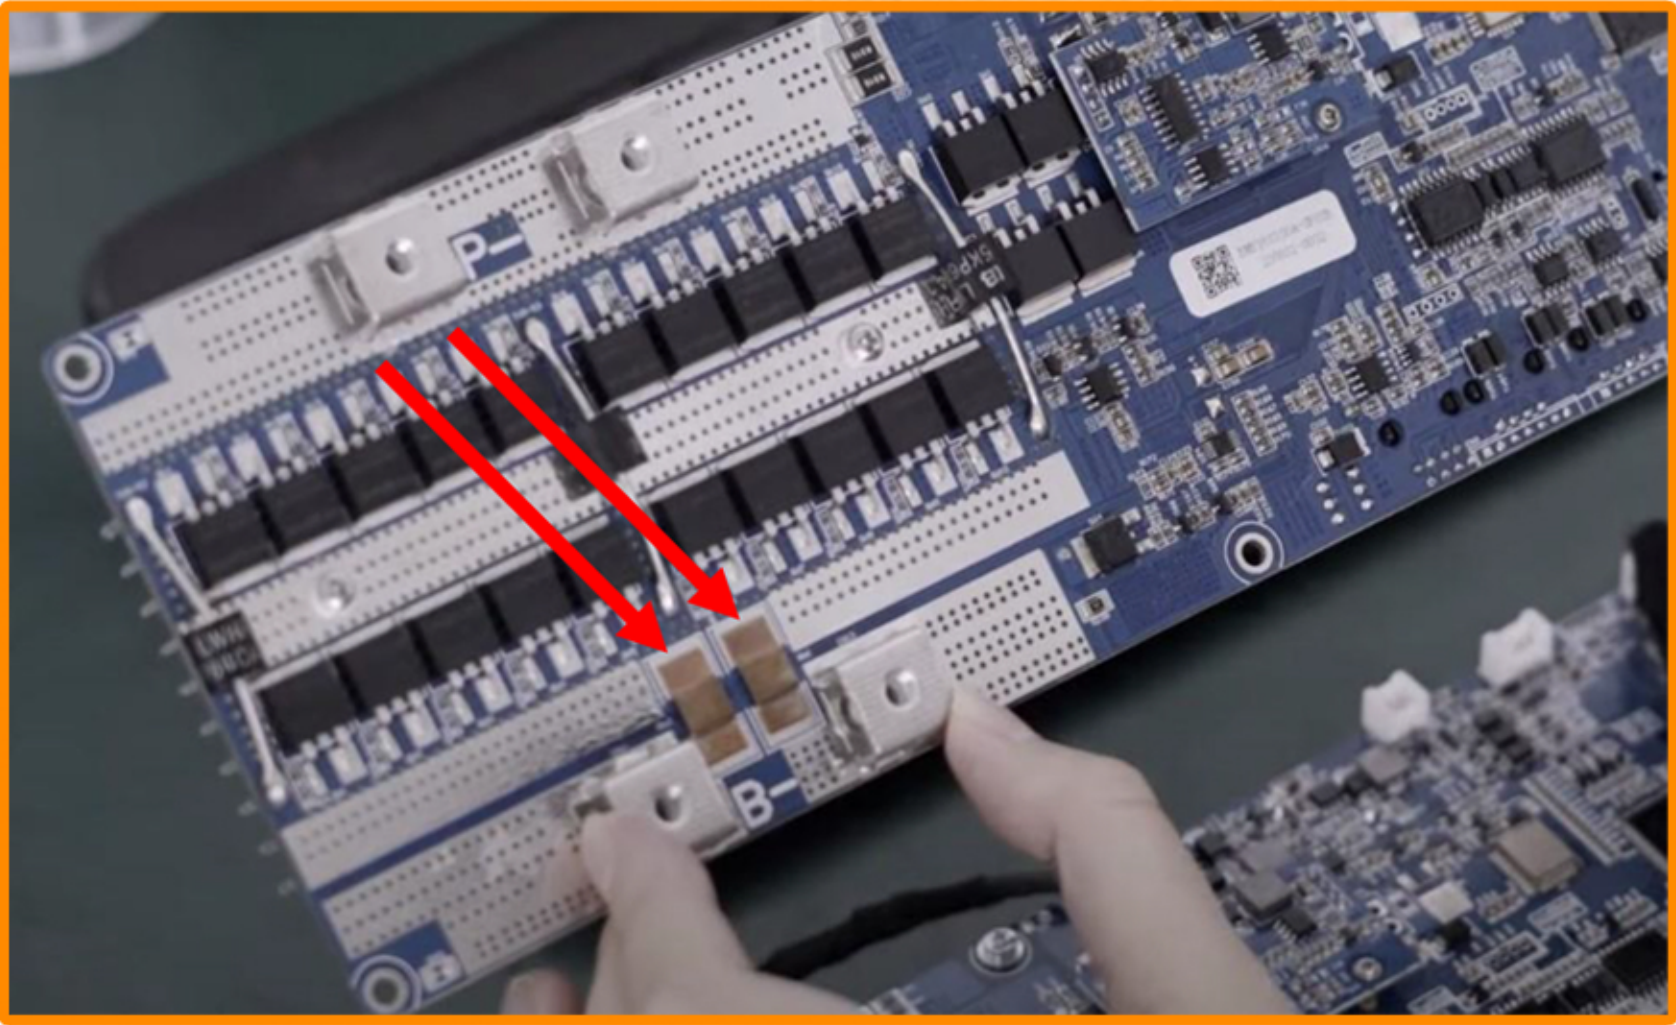


200A

Hardware Version 10 has eight shunts beside the terminals
(select firmware file in the V10 folder)

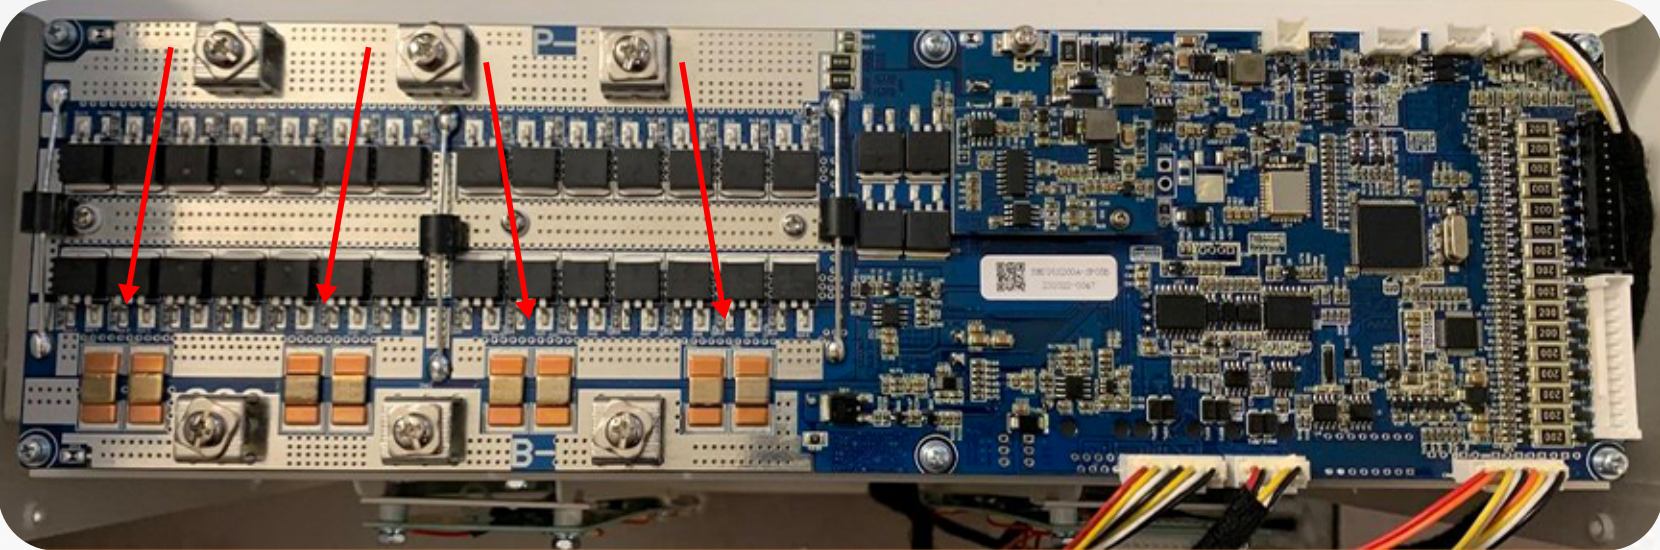


Hardware Version 11 has two shunts in between the terminals
(select firmware file in the V11 folder)

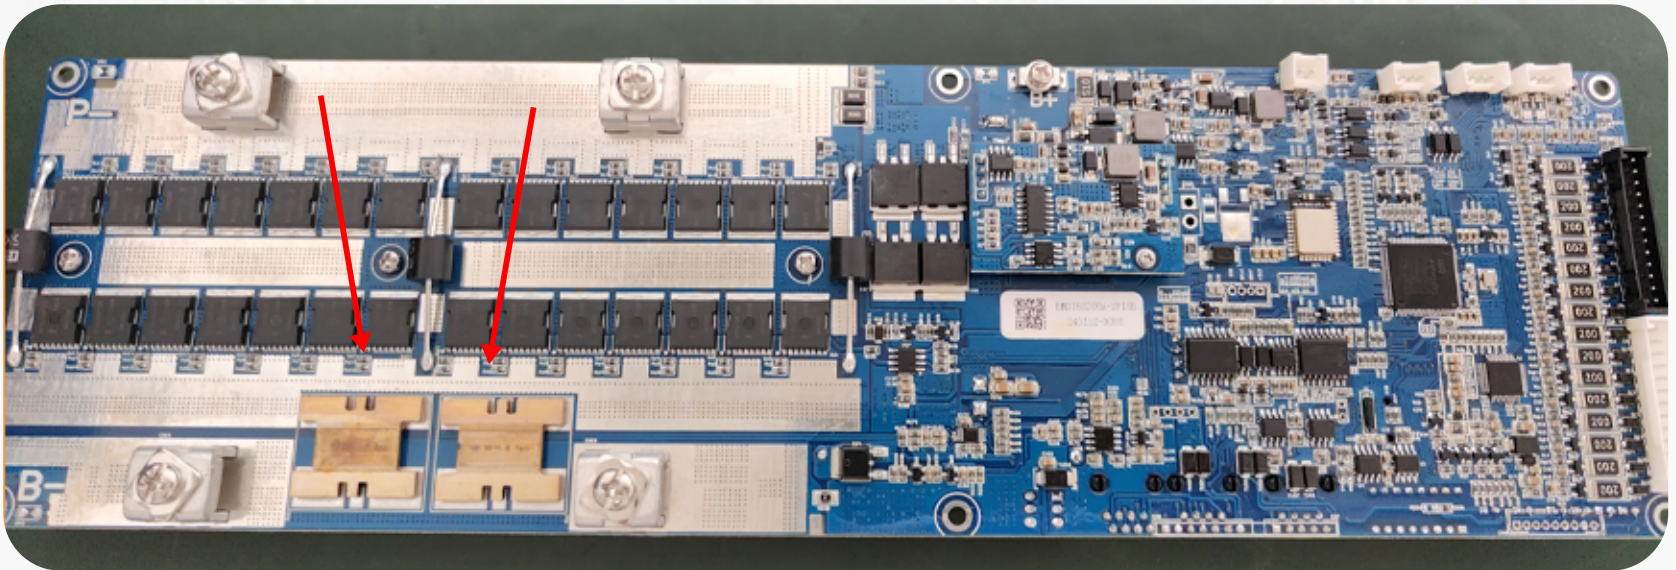

Method Two:

Open the BMS upper computer software and you can identify it through the Firmware Version in the lower right corner.

If the Firmware version is 0.1~0.4, it is V10.

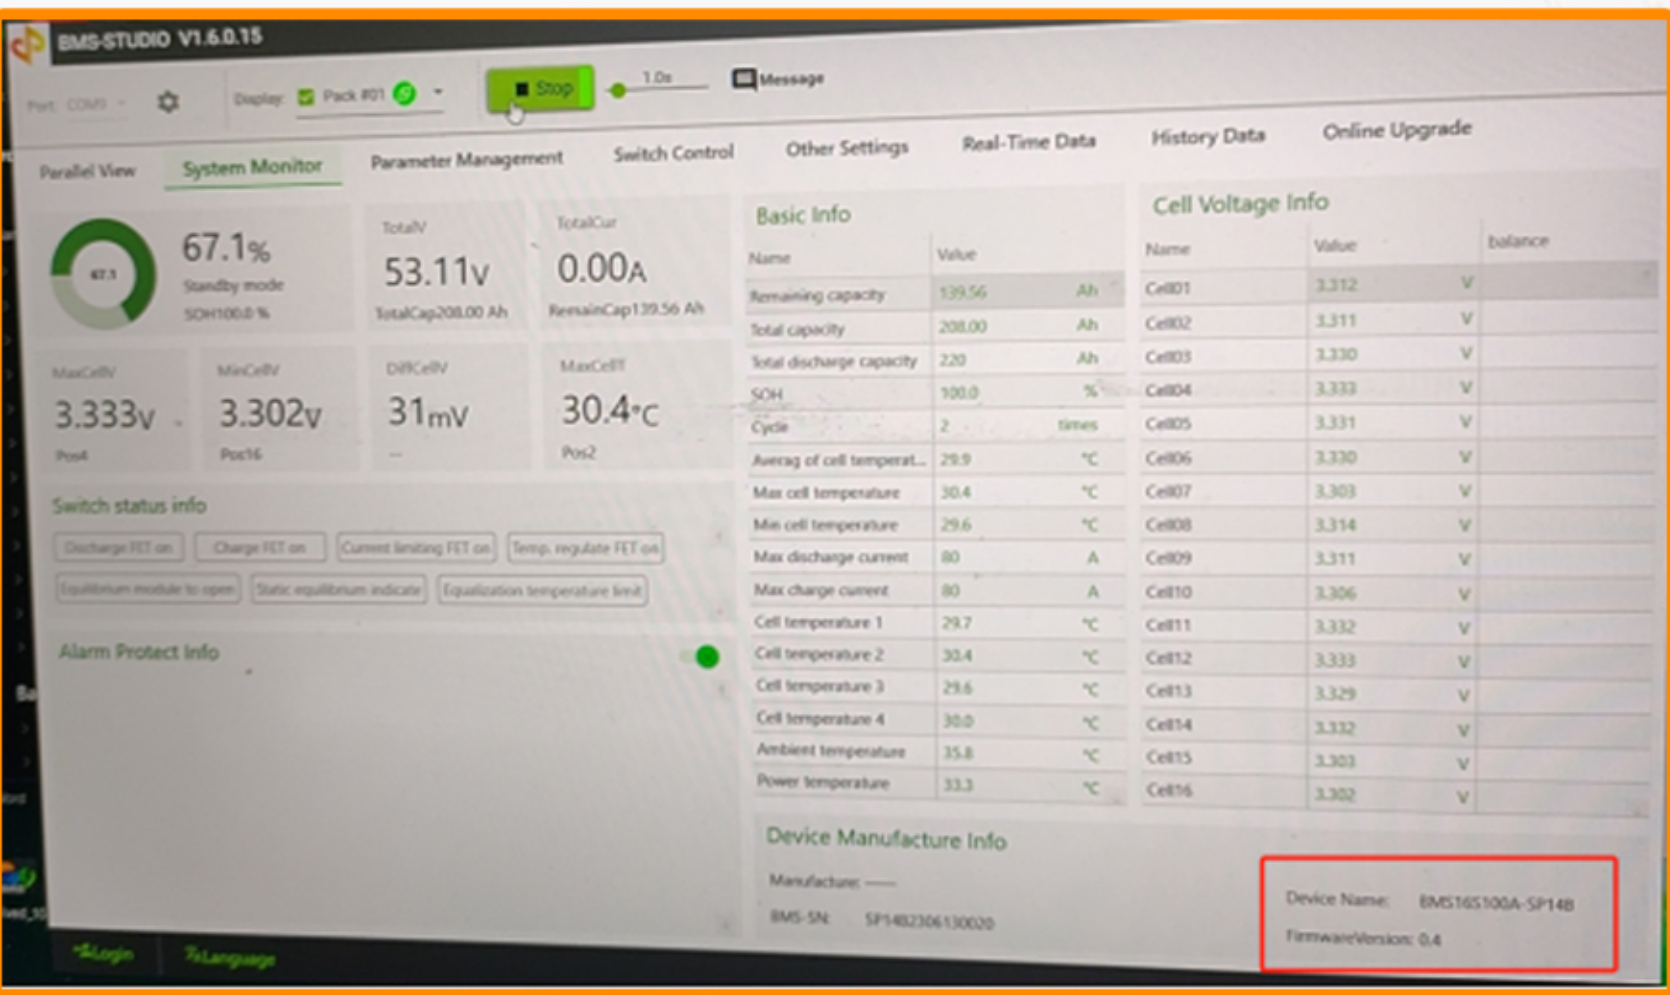

If the Firmware version is 1.1, it is V11.

